


USING THE TOASTER

Step by Step Guide:

1. Plug in the toaster
2. Put bread in the slots
3. Choose number of heated slots wanted
4. Turn timer (2 for a starting point). The timer will work without the plug being in (but won't toast)
5. Use the lever to lower toast down into the toaster. Watch toast as it **won't pop up** by itself. Use lever to bring toast up.

The Components

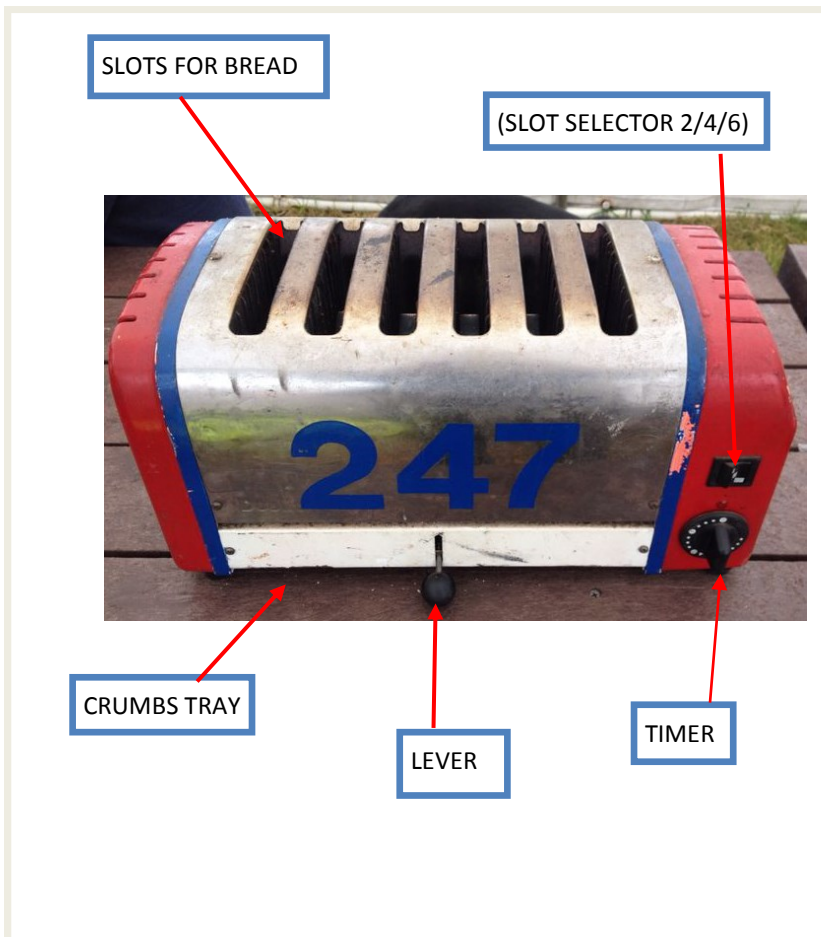

Toaster maintenance

- ◇ Clean toaster after use. (Make sure it is cool before you do this though)
- ◇ Empty crumbs tray daily.
- ◇ Don't let the toaster overheat as your bread will start sticking.
- ◇ If any bread does get stuck, switch toaster off and remove plug. You can then remove all bread that's stuck.
- ◇ Make sure you don't leave any bread in the toaster or it will start to burn

Health and Safety

- ◇ Always unplug the toaster before sticking knives etc into the toaster
- ◇ Don't butter the bread before putting it into the toaster
- ◇ Use toaster tongs

